

INSTALLATION & ASSEMBLY INSTRUCTIONS

WOODEN FIREPLACE SURROUND

SUPERIORFIRES

Superior Fires
Christchurch, Dorset BH23 2BT
Tel: 01202 588 632
Fax: 01202 499326
www.superiorfires.co.uk
Email : sales@superiorfires.co.uk

MODELS COVERED BY THESE INSTRUCTIONS

SUTHERLAND FIREPLACE SURROUND
SF12-203-001



MODEL SHOWN: SUTHERLAND

Please note : Except where otherwise stated, all rights, including copyright in the text, images and layout of this booklet is owned by Focal Point Fires plc. You are not permitted to copy or adapt any of the content without the prior written permission of Focal Point Fires plc.

All instructions must be handed to the user for safekeeping.

Revision A - 07/15

© 2015 Focal Point Fires plc.

Section	Contents	Page No.	Section	Contents	Page No.
1.0	Important notes	2	5.0	Installation	5
2.0	Tools required	2	6.0	Cleaning/ finishing	5
3.0	Hardware & parts list	2	7.0	Guarantee - terms and conditions	5
4.0	Assembly	3			

1.0 IMPORTANT NOTES

To ensure safe and stable installation:

1. The assembled Fire Surround must be fixed / secured to wall.
2. The wall must be sturdy and in good repair.
3. Some walls require alternative fixings (not included).
4. When drilling into the wall, check for hidden pipes and cables.

2.0 TOOLS REQUIRED


















Cross head screwdriver PZ2 (3 inches in length or greater)

Drill, 6mm and a 2mm suitable drill bit



Pencil

Tape measure

3.0 HARDWARE & PARTS LIST

CODE	NAME	FIGURE	QUANTITY	CODE	NAME	FIGURE	QUANTITY
A	WOOD DOWELS (8X20mm)		16PCS	①	TOP PANEL		1PC
B	CAM LOCKS (15X9mm)		5PCS	②	FRONT PANEL		1PC
C	CAM BOLTS (6.5X35mm)		5PCS	③	LEFT SIDE LEG		1PC
D	WOOD SCREW (8X25mm)		14PCS	④	RIGHT SIDE LEG		1PC
E	WALL SCREW (8X38mm)		2PCS	⑤	INSIDE LEGS		2PC
F	WOOD SCREW (3X20mm)		4PCS	⑥	LEFT SIDE PANEL		1PC
G	WALL PLUG (6X25mm)		2PCS	⑦	RIGHT SIDE PANEL		1PC
H	MIRROR PLATES (45X43mm)		2PCS				
I	GLUE (10g)		1PCS				
J	ALLEN KEY		1PCS				



STEP 1

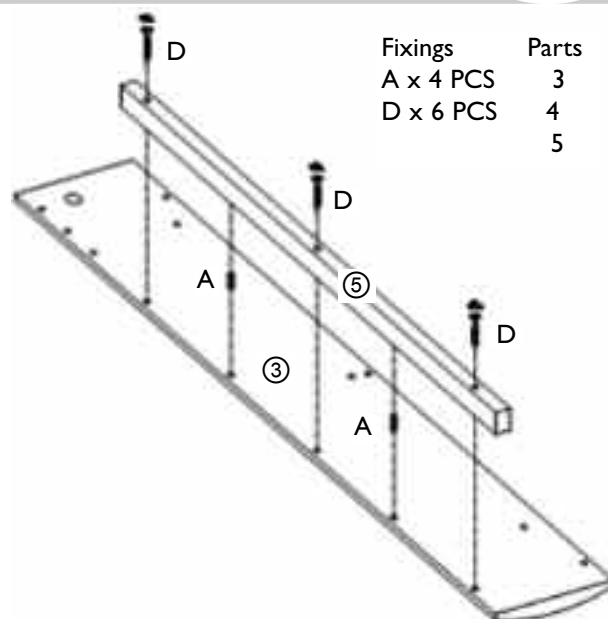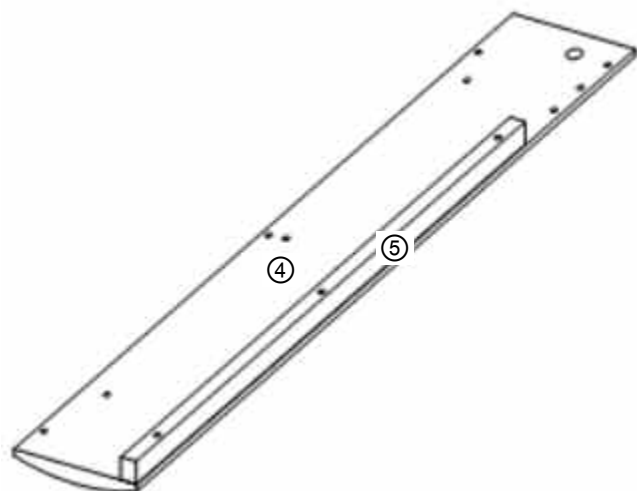

Fixings	Parts
A x 4 PCS	3
D x 6 PCS	4
	5

Using a drop of glue (I) in each dowel hole, insert two dowels (A) in to the left leg (3). Again, using a drop of glue (I) in the dowel holes take the inside leg (5) and push them on to the dowels. Use 3 wood screws (D) to screw the part together. Repeat the process using the right leg (4) and other inside leg (5).


STEP 2

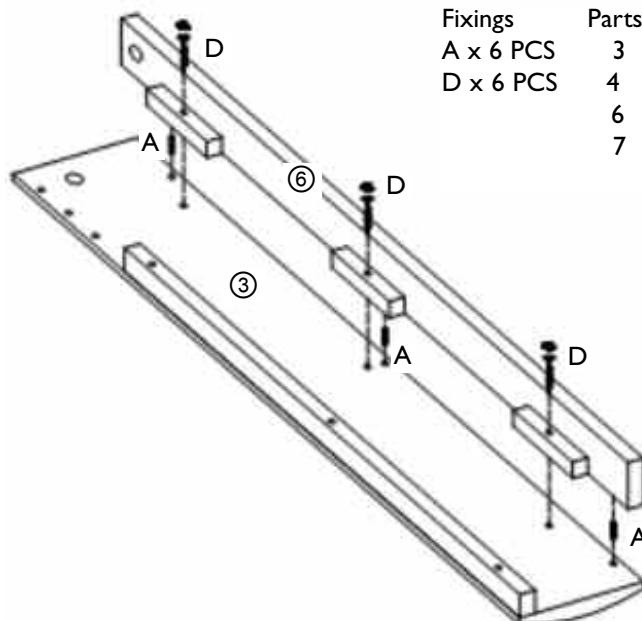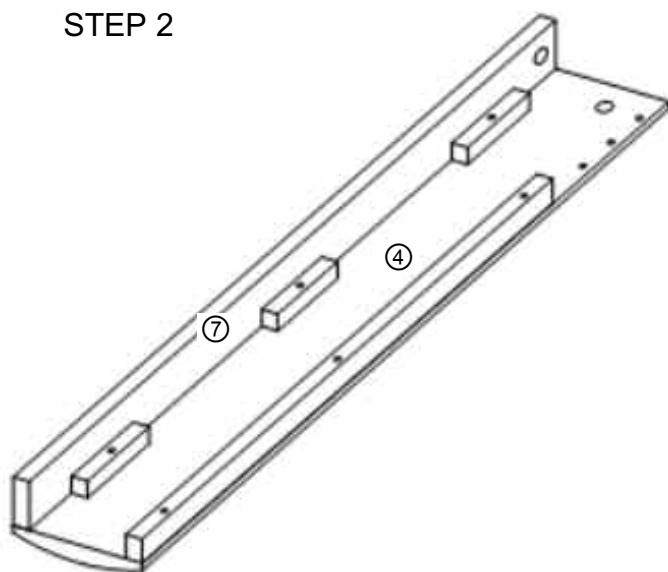

Fixings	Parts
A x 6 PCS	3
D x 6 PCS	4
	6
	7

Using a drop of glue (I) in each dowel hole, insert 3 dowels (A) in to the left leg (3). Again, using a drop of glue (I) in the dowel holes take the left side panel (6) and push them on to the dowels of the leg (3). Use 3 wood screws (D) to screw the left side panel (6) to the left leg (3). Repeat the process for the right leg using the right leg (4) and the right side panel (7).

STEP 3

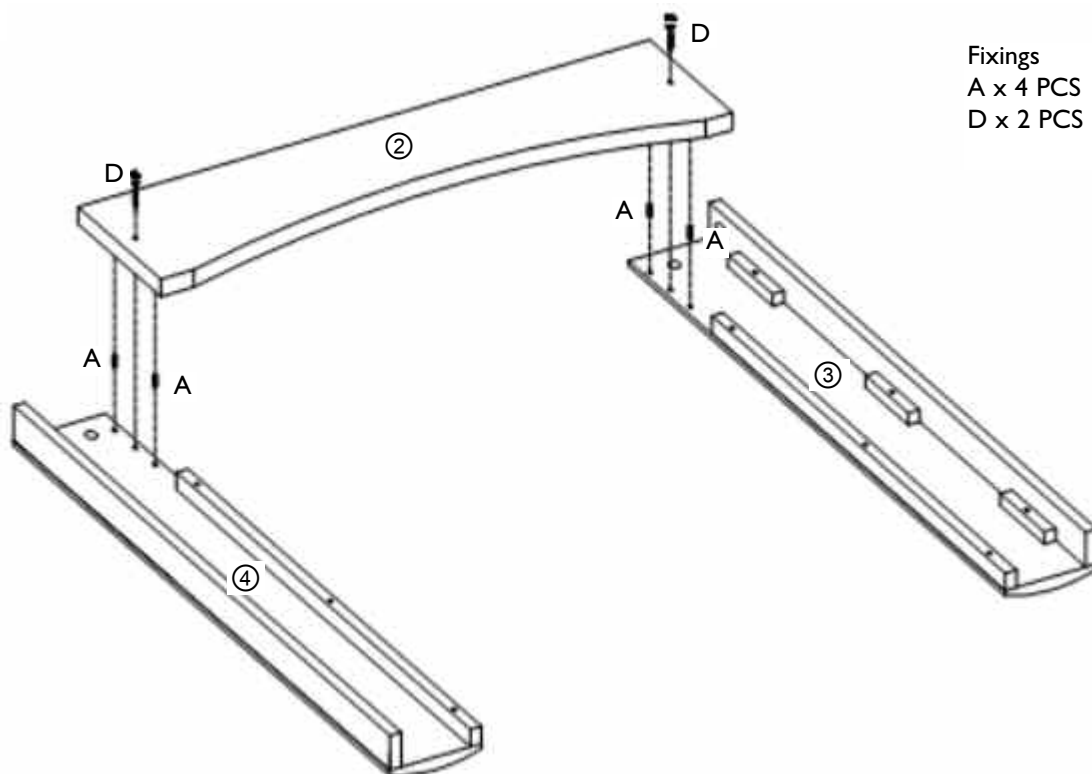


Fixings
A x 4 PCS
D x 2 PCS

Parts
2
3
4

Gently lay both legs you have prepared onto a suitable protected surface. Be extremely careful not to scratch the front edges of the legs. **DO NOT DRAG THE LEGS!** Make sure that the legs are lifted every time they are moved to avoid them from being damaged.

Now lay the left hand leg on your right and the right hand leg on your left, both facing down. use the Glue (I) in the dowel holes before inserting 2 dowels (A) into the left and right hand legs. Now using the glue (I) in the dowel holes, position the front panel (2) onto the dowel joints in the legs to ensure the legs are at the correct distance apart. Also checking that the front panel is the correct way around. Once on you are then able to screw the wood screws (D) into position.

STEP 4

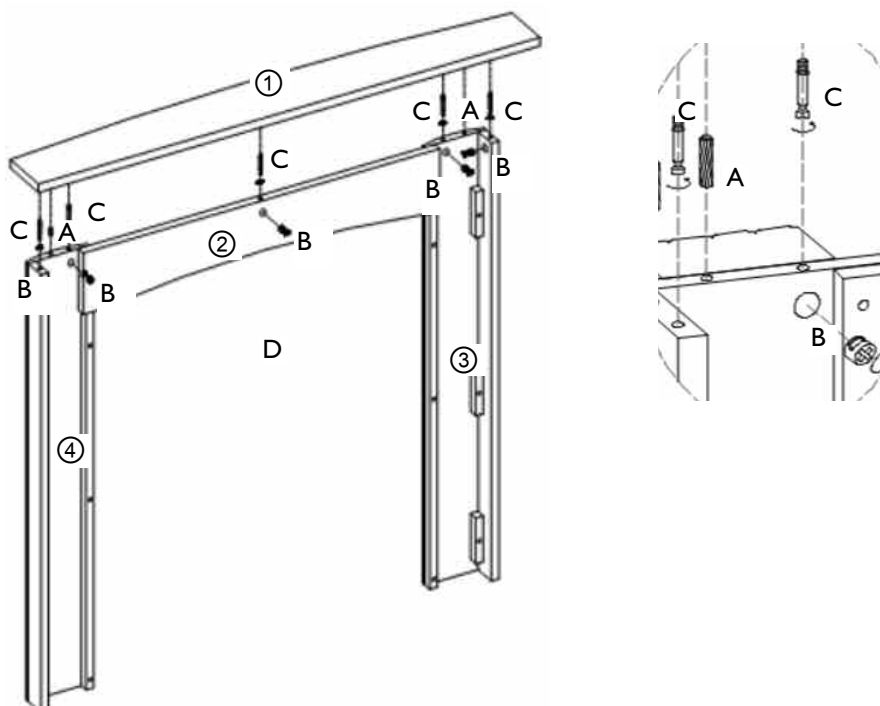


Fixings
A x 2 PCS
B x 5 PCS
C x 5 PCS

Parts
1
2
3
4

Insert 2 cam locks (B) into each leg (3&4), and one in to the front panel (2). Next prepare the top panel (1) by screwing all 5 cam bolts (C) into position. The dowel joints (A) need to be glued in at both ends of the top panel. Connect the top panel to the surround, making sure all 7 inserts are in their correct position. Once home, all 5 cam locks (B) can be tightened.

Fixings
E x 2 PCS
F x 4 PCS
G x 2 PCS
H x 2 PCS

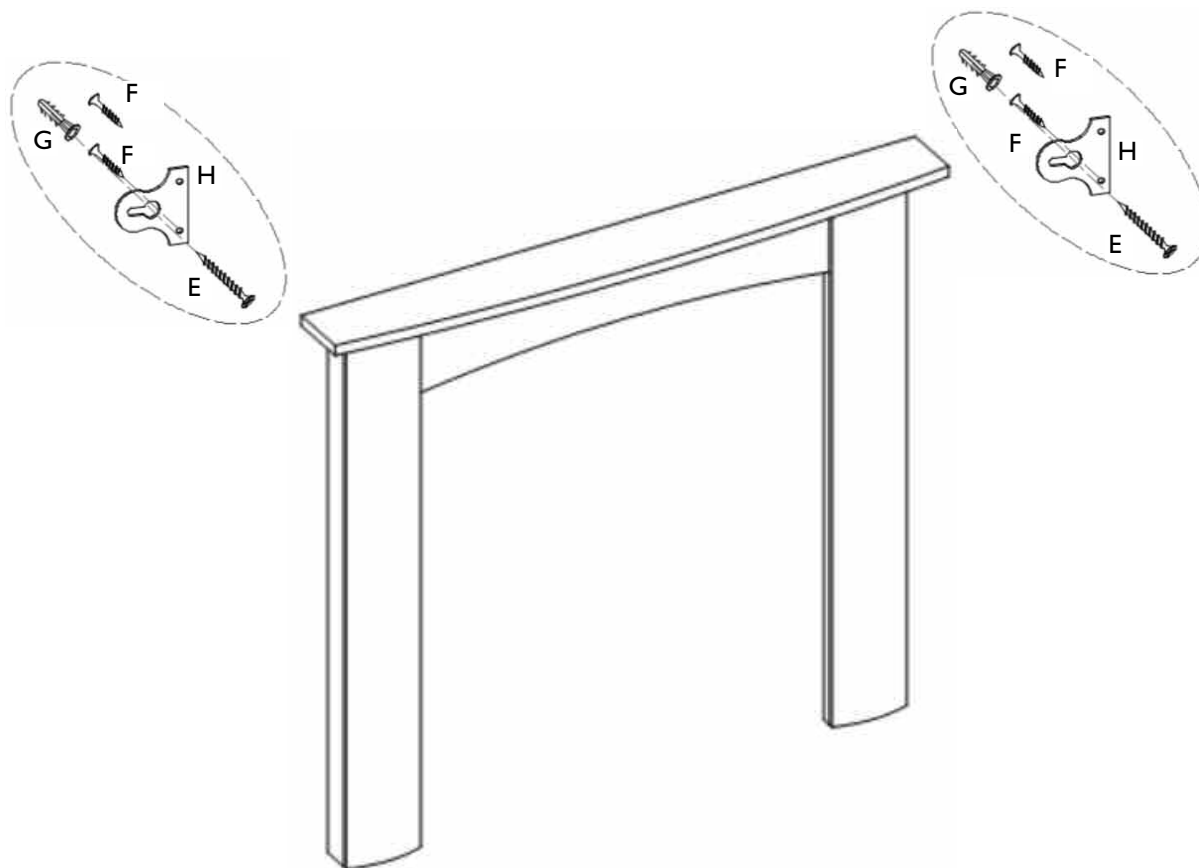

With a pencil mark out the desired height where you would like the mirror brackets (H) to be situated on the rear of the legs. To avoid splitting the leg, pre drill the bracket holes with a 2mm drill bit. Now attach the brackets to the legs using the 3x20mm screws (F). Once the brackets are in position, centre and level the hearth into its final fitting position. Position the surround on the hearth to correspond with the header/fireplace lintel, mark with a pencil on the wall where you wish to drill. Remove the surround and prepare the wall from the marked positions. If using the fixings supplied, drill a hole in the wall using a 6mm drill bit. If not, use a suitable drill bit for the wall plugs you are using. Insert the wall plugs (G) into position. Offering the surround back up into position against the wall, you are now able to secure the surround to the wall using the 8x38mm screws (E).

6.0 CLEANING/ FINISHING

Before carrying out any of the following operations, ensure that the appliance is OFF and completely cold. Regularly clean around the appliance to ensure that dust, fluff, pet hair etc, are kept to a minimum. There are no other specific requirements for care, other than regular cleaning of the general appliance.

A wipe with a dry cloth is normally sufficient. **DO NOT** use abrasive cleaners as they can damage the finish. Test on a hidden part before cleaning. Clean only in the direction of the grain. Regularly check the surround is securely fixed in position.

7.0 GUARANTEE - TERMS AND CONDITIONS

The 3 year guarantee commences from the date of purchase, provided that the terms and conditions are adhered to:

Registration is not required.

1. For any claim to be made within the 3 years from date of purchase you will be required to provide and supply us with your proof of purchase.

Making a claim is easy.

If you wish to make a claim under our 3 year guarantee and all the terms and conditions for your product have been met then please submit the following information for the attention of the 3G Service Department to the address below. Alternatively, you can email or fax. Please note that this does not affect your statutory rights.

Focal Point Fires plc, 3G Service Department, Reid Street, Christchurch, Dorset, BH23 2BT.
Alternatively email: 3g@focalpointfires.co.uk or fax. 01202 499326.

Details required:

1. Name, full address including post code and contact telephone number.
2. Receipt of purchase or credit card statement.